




QUICK GUIDE

EverFlash eComp + SR Slide Kit

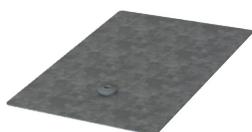

EverFlash eComp, 8x12"

Material: aluminum
Finish: silver, black

| 4000366
4000367



L-Foot Slotted Set

Material: aluminum
Finish: mill, dark
Hardware: stainless steel

| 4000630
4000631



5/16" Sealing Washer


Material: stainless steel, EPDM insert



5/16" Lag Bolt

Material: stainless steel

| 4000359




Slide Kit

Material: aluminum

| 4000709

Assembly


1 LOCATE RAFTERS

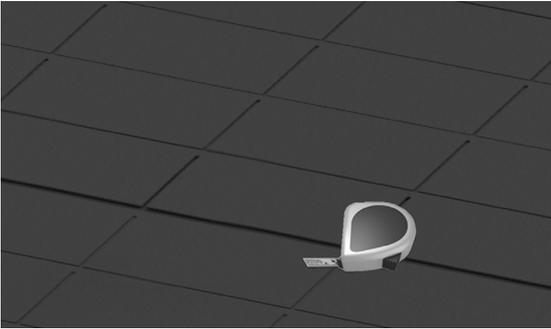

Locate the rafters and snap horizontal and vertical lines (measured according to CrossRail Shared Rail Assembly Instructions) to mark the installation position for each EverFlash eComp flashing.

Materials Required: Measuring tape, string line

2 BREAK SEALS

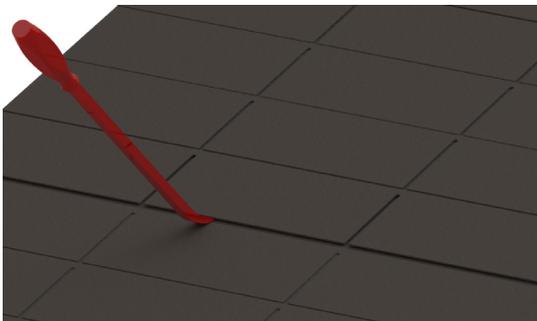


It is important to remove any obstructing nails in the 2nd course of shingles as they can prevent the flashing from extending up under the 3rd course of shingles.

This is required by the roofing manufacturer's instructions and warranties, and the Asphalt Roofing Manufacturer's Association guidelines.

Use roofing bar to break the seals between the 1st and 2nd, and 2nd and 3rd shingle courses. Be sure to remove all nails to allow correct placement of flashing.

Materials Required: Roofing bar

3 DRILL PILOT HOLE

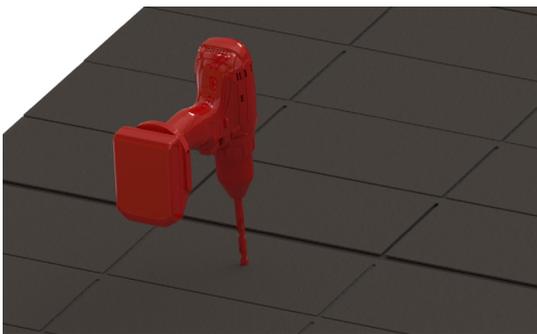

Drill a 1/4" pilot hole by drilling square to the rafter using a 1/4" drill bit.

Materials Required: 1/4" drill bit, drill


4 SEAL PILOT HOLE



Filling the pilot hole with sealant is a secondary waterproofing step, which is required by the roofing manufacturers.

Materials Required: Appropriate sealant


5 OPTIONAL: SEAL FLASHING

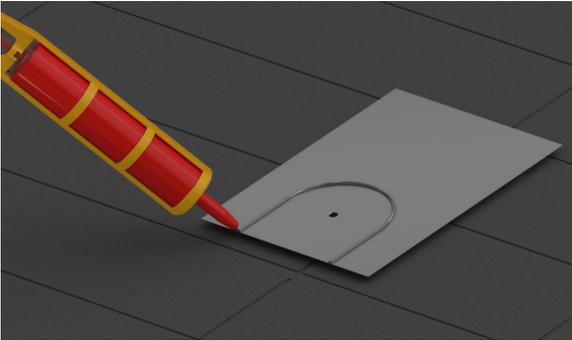

Apply an upside-down U-shape bead of sealant to the underside of the flashing before insertion.

Materials Required: EverFlash eComp flashing, appropriate sealant


6 INSERT FLASHING

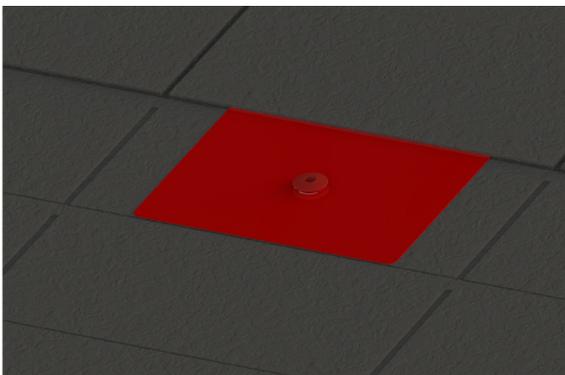

Slide the eComp flashing under the 2nd course of shingles so that the bottom flashing edge does not overhang the butt edge of the shingles. This requirement ensures that the flashing extends up under the 3rd course of shingles and the minimum head-lap is achieved.

Materials Required: EverFlash eComp flashing

7 INSTALL SLIDE KIT

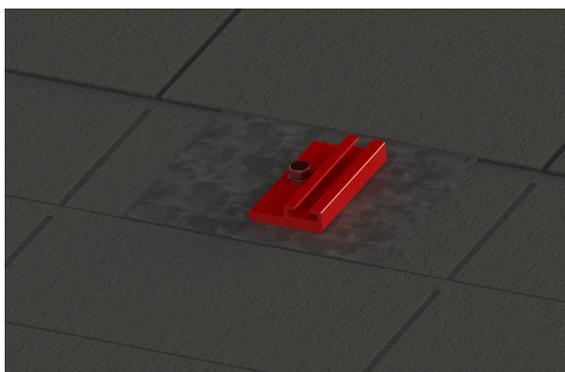

Line Shared Rail Slide Kit pilot hole with EverFlash flashing hole. Insert the lag bolt through Slide Kit, EverFlash eComp flashing and into the rafter.

Torque: The range is between 8.3-11.6 ft-lb depending on the type of wood and time of year. If using an impact wrench to install the fasteners, be careful not to over-torque the fastener. You may need to stop and use a ratchet to finish the install.

Note: We recommend the use of the Slide Kit for a CrossRail Shared Rail system to adjust rail alignment during module installation. Refer to CrossRail Shared Rail Assembly Instructions to finish system install.

Materials Required: EverFlash eComp Kit, Slide Kit, drill, 1/2" socket, torque wrench